



**MAINTENANCE AND OPERATING INSTRUCTIONS
MODEL 30-185 MOTOR-GENERATOR
"NOBRUSH" PERMANENT MAGNET FREQUENCY
CONVERTER
HORIZONTAL UNIT SHELL TYPE**

GEORATOR Corporation
9617 Center Street
Manassas, Virginia 20110
USA
800-523-9938, 703-368-2101, fax 703-368-1078
WWW.Georator.com



SPECIFICATION
GEORATOR CORPORATION
MANASSAS, VIRGINIA 20110

MODEL NO. 30-185

TYPE 18-A FREQUENCY CONVERTER

1.0 INPUT:

- 1.1 Motor: Baldor Stator & Rotor; 2.25 H.P., 3 Phase, 60 Hz, 220V, 1760 RPM FL, Georator P/N 18-034-1
- 1.2 Input Current: 8.7 Amperes
- 1.3 Insulation: Class B
- 1.4 Max. Ambient Temperature: 50 C
- 1.5 Duty: Continuous

2.0 OUTPUT:

- 2.1 Rating: 1.5 KVA, 100% P.F., 3 Phase, 400 Hz (Nom.) 115/200V (Nom.)
- 2.2 Output Voltage, No Load: 124V (+/-1V) L-N
- 2.3 Output Current: 4.35 Amperes
- 2.4 Insulation: Class B
- 2.5 Max. Ambient Temperature: 50° C
- 2.6 Dielectric Strength, Winding to Frame: 1500V for 1 Min.

3.0 VIBRATION: Within 0.001"

4.0 BEARINGS: Shielded, Extended Life Ball Bearings

5.0 FINISH:

- 5.1 Primer: Modified Alkyd Resin, Fed Std. TT-P-664D
- 5.2 Paint: Silver-Blue Enamel

6.0 APPROX. WEIGHT:

- 6.1 Net: 115 Lbs.
- 6.2 Shipping: 150 Lbs.

Rev. Letter	Date	Revision Description
A	8-5-03	MOTOR WAS PEERLESS; DELETED HOUSING MARKING NOTE.
ENGINEER		J. RAHAW
APPROVED BY		04/02/2008 WKH

GEORATOR CORPORATION

Manassas, Virginia

MAINTENANCE AND OPERATING INSTRUCTIONS MODEL 30-185 MOTOR-GENERATOR "NOBRUSH" PERMANENT MAGNET FREQUENCY CONVERTER HORIZONTAL UNIT SHELL TYPE

NOTE

These instructions are general in nature. Some particular models may vary in size and precise locations for components. However, we believe that the user will be able to make those adjustment mentally. If you are at all concerned, please feel free to contact Georator Corporation with any questions you may have.

GENERAL

The unit shell type of "NoBrush" frequency converter utilizes a metal housing enclosing both motor and generator components. In most models, this housing or shell is an aluminum casting. In a few militarized models, it is a wrought steel shell. The motor and generator stators are mounted within this shell. The motor and generator rotors are mounted upon a unit shaft, which rotates in ball bearings in the two end bells. The shaft does not project from the end bells.

The internal construction of both the motor and generator resemble very closely that of a three phase, squirrel cage, induction motor. The maintenance attention required will be the as would be required for a three phase motor, operating under similar conditions.

Normally, it should not be necessary to dismantle the unit. Generally, attention will be required only if the unit has accidentally been splashed with or immersed in water or has been exposed for long periods to very dusty atmospheres, especially where fibrous dust exists. In such cases it will be desirable to disassemble the unit, clean the windings and re-treat with varnish if necessary.

This contingency is not a usual one. A safe guide to the need for treatment would be that noted above, namely, whatever treatment would have been appropriate for a three phase induction motor, subjected to the same conditions.

The other condition for which disassembly may be required will be replacement of a defective bearing. The procedure for disassembly of the unit and replacement of the bearings is given on page 2.

The generator unit will not be adversely affected by a dead short circuit applied across its terminals. A prolonged short circuit may overheat the unit and may also result in damage to the associated wiring and equipment. Normal overload protection should therefore be provided.

The "NoBrush" generator portion of the converter will deliver a very stable voltage at constant load, without the use of a regulator. In most cases the voltage will remain within acceptable limits throughout the full range of rated load. This makes possible total elimination of a regulator.

For those applications where very close voltage control is required, despite large variations in load, regulators are available as auxiliaries.

LUBRICATION

In most models, sealed, lubricated-for-life bearings are utilized. These will not normally need lubrication nor other attention of any sort.

In some models, provision for re-lubrication has been made. These models can be distinguished by a removable circular cover at the center of each end bell, held by small screws. To re-lubricate these models, the screws and end cover are removed, clean grease applied with a spatula, the cover replaced and any excess grease wiped off.

INPUT AND OUTPUT CONNECTIONS

The large rectangular terminal box at one side of the unit has the motor and generator terminals. The motor terminals can be distinguished by the fact that the motor connection diagram is directly above them. This diagram is usually on an etched plate, giving the scheme of re-connection for different input voltages.

Units which operate from single phase input are provided with a starting relay and starting capacitor. These are similar to the usual relay and capacitor arrangements used for capacitor-start motors.

Replacements for the relay or capacitor can generally be obtained from motor parts supply houses. Care should be taken that the replacement capacitor is of the same voltage rating and approximately the same capacitance as that it replaces. If a replacement relay is utilized, care should be taken to see that it does not have a greater overall height than the relay it replaces. Capacitor replacements are required only rarely and relay replacements extremely rarely.

Wear or deterioration of the relay contacts will be dependent upon the number of times the unit is started. If started infrequently, on the average of once a day or so, inspection of the contacts

about once a year will suffice. If started several times a day, inspection should be about every six months. Maintenance will consist of dressing the contacts if they appear to be badly burned or pitted.

PROCEDURE FOR DISASSEMBLY OF THE UNIT AND REPLACEMENT OF BEARINGS

1. Remove the through bolts, Item 8, nuts, Item 9, and also the end bell plugs, Item 7. Remove both end bells, Items 4 and 5.
2. Set converter upright on motor end on a wooden block, about three inches high and not larger than the inside diameter of the motor stator.

NOTE: The motor stator has a smaller inside diameter than the generator stator and can be distinguished in this way.


3. Press housing (frame), Item 1, downward. Magnetic forces will tend to hold the rotor in place so that considerable pressure may be required, especially on the higher rated models of 2 or 3 KVA output.
4. Lift shaft assembly, Item 2, from housing. Store generator rotor away from magnetic materials to avoid partial demagnetization or clinging of magnetic particles. It is recommended that the rotor be wrapped with paper temporarily to keep it free of magnetic particles.
5. Bearings may be removed with a bearing or gear puller.
6. To replace bearings, Item 3, press only on the inside race-- do not tap.

NOTE: Bearings require only a light push fit. Never remove a bearing that is not to be replaced with a new one. Removal and replacement may seriously shorten its life.

TO REASSEMBLE

1. Put end bell, Item 5, on the motor end of the housing, Item 1.
2. Set upright on end bell.
3. Lower shaft assembly, Item 2, carefully into housing and push shaft gently into bottom end bell.
4. Put generator end bell, Item 4, on and push into housing.

5. Replace through bolts, Item 8 and nuts, Item 8.
6. Replace plugs, Item 7.

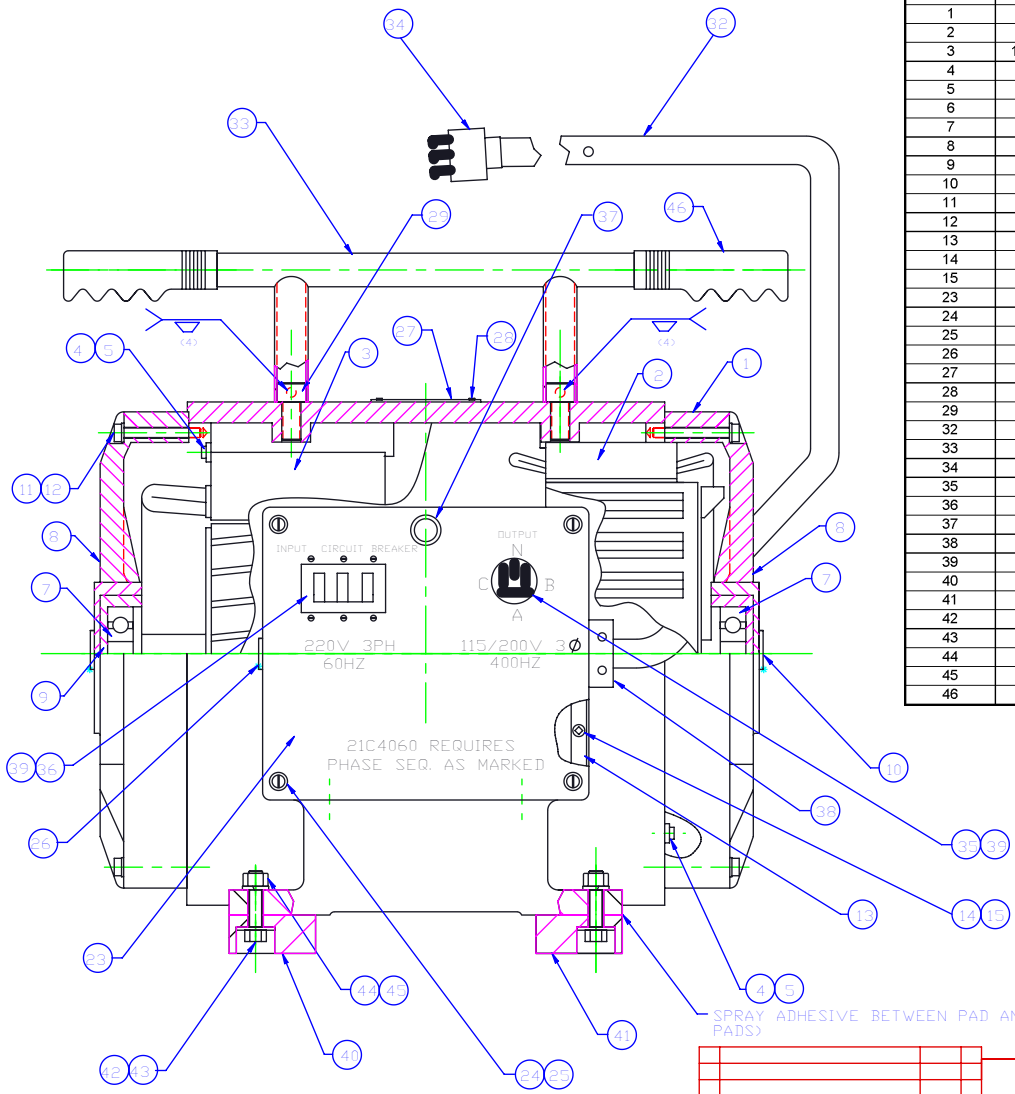


ITEM	PART NO.	QTY	DESCRIPTION
1	10-276-1	1	HOUSING 18-A USC W/HANDLE
2	05-179	1	STATOR ASSEMBLY, GENERATOR
3	18-034-2-R	1	STATOR ASSEMBLY, MOTOR
4	28-088	16	WASHER, STATOR RETAINING
5	322	16	SCREW: #10 X 1/2, SELF-TAPPING, HEX
6	14-030-2	1	SHAFT ASS.Y (SHAFT, GEN. MOTOR)
7	27-009	2	BALL BEARING: SKF#6305 2ZJEM
8	12-0699	2	END BELL
9	26-054	1	SPRING WASHER
10	13-021	2	PLUG. BTN 1.0 ZINC PLD
11	412	8	SCREW: 1/4-20 X 2.0 HEX HEAD, ZINC
12	476	8	LOCKWASHER, 1/4 MDM SPLIT, ZINC
13	11-221	1	TERMINAL BOX 18-A USC SPECIAL
14	325	4	SCREW #10 X 5/8, SELF TAPPING HEX
15	498	4	FLATWASHER: #10, STL. ZINC PLD.
23	13-242E	1	COVER, TERMINAL BOX, ENGRAVING
24	320	4	SCREW: 8-32 X 3/8, RDH STL
25	487	4	LOCKWASHER: #8 MDM SPLIT STL.
26	13-030	1	PLUG, BTN 7/8, ZINC PLD.
27	20-3152	1	NAME PLATE, GEORATOR, 30/33 SER
28	301	4	SCREW: #0 X 3/16, RDH STL.
29	426.6	2	S.H.C.S. 1/2-13 X 1.0 LG. ZINC PLD.
32	29-1064	1	CABLE LG. 28' FT. 4-COND #16 SO, 600V
33	16-250	1	HANDLE, WELDMENT, 18-A USC
34	29-613	1	CONN, LKG CABLE PLUG, 120V, 20A
35	29-614	1	CONN, STR. BLADE RCPT, 120V, 20A
36	29-612	1	CIRCUIT BREAKER: 3-POL, 15A, 250V
37	29-605	1	INDICATOR LIGHT: T3-1/4, RED LENS
38	29-922	1	CONN BOX, 3/8" STRAIGHT ROMEX
39	316.2	8	SCREW: MACH 6-32 X 1/4, OVH STL.
40	26-137	2	PAD, TYPE-A, RUBBER, 2.5 SQ. X 1 THK
41	26-137	2	PAD, TYPE-B, RUBBER, 2.5 SQ. X 1 THK
42	428	4	SCREW: HEX CAP 3/8-16 X 1 1/2 ZINC PLD.
43	496	4	FLATWASHER, 3/8 NOM.
44	354	4	NUT, HEX 3/8
45	480	4	LOCKWASHER, 3/8 NOM.
46	26-207	2	BLACK BICYCLE GRIPS, 7/8 ID

SPRAY ADHESIVE BETWEEN PAD AND HOUSING (TYP 4 PADS)

GEORATOR Corporation 967 Center Street, Mechanicsville, VA 20110-2521, U.S.A. Telephone: (703) 348-2301 FAX: (703) 348-0378	
PLOT: FULL DATE: 1-16-04 TIME: 1:55 USER: 22-307.DWG	FINAL ASSEMBLY 18-A U.S.C. SET PARTS LIST C 22-307 B

REV	DESCRIPTION	APP'VD	DATE
A	REDRAWN IN AUTOCAD WITH NO CHANGES	T.A.R.	6/5/03

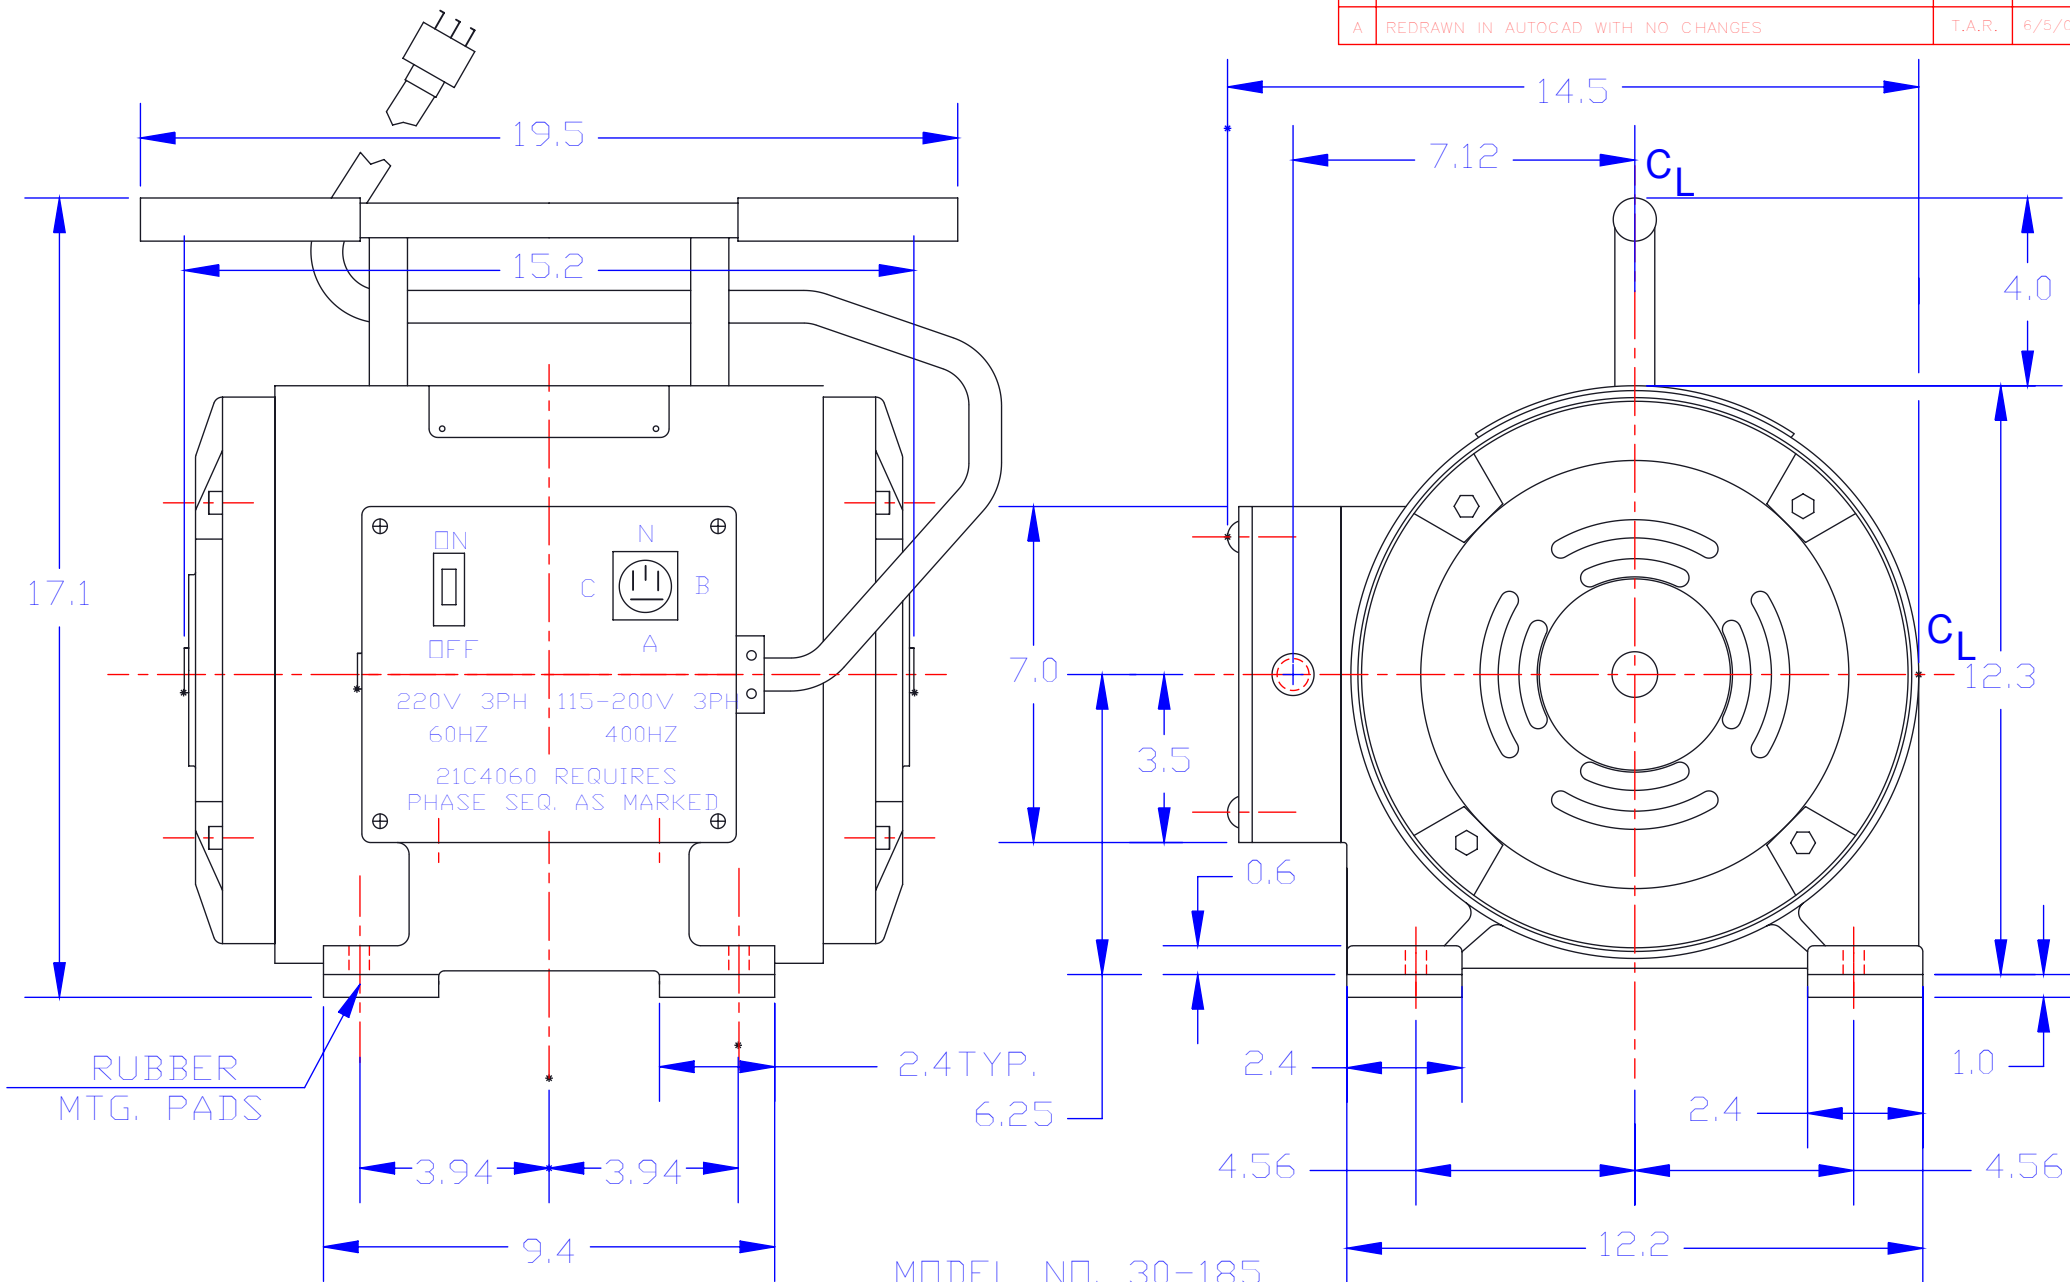

UNSPECIFIED TOLERANCES
 FRACTIONAL N/A
 DECIMAL
 .X ±0.1 ANGULAR ±N/A
 .XX ±0.03
 .XXX ±0.010

This drawing and any part thereof is the property of GEORATOR CORPORATION, and is subject to return on request by this company. The information shown is confidential and the recipient by accepting this drawing agrees not to use any information contained thereon in any manner which will be detrimental to GEORATOR CORPORATION.

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.

DATE 1/27/70
 DRAWN F.L.
 FILE 23-638.DWG
 APP'D.
 SCALE NONE





GEORATOR Corporation
 9617 Center Street Manassas, VA 20110-5521, US
 Telephone (703)-368-2101 FAX (703) 368-1078

DO NOT SCALE DRAWING NAME
 OUTLINE DRAWING
 U.S. CONVERTER SERIES 30
 MATERIAL
 DWG. NO. A 23-638
 SHEET 1 OF 1
 REV

INPUT
2-1/4 H.P., 3 PHASE, 60 HZ, 220V L-L

OUTPUT
1.5 KVA, 3 PHASE, 400 HZ

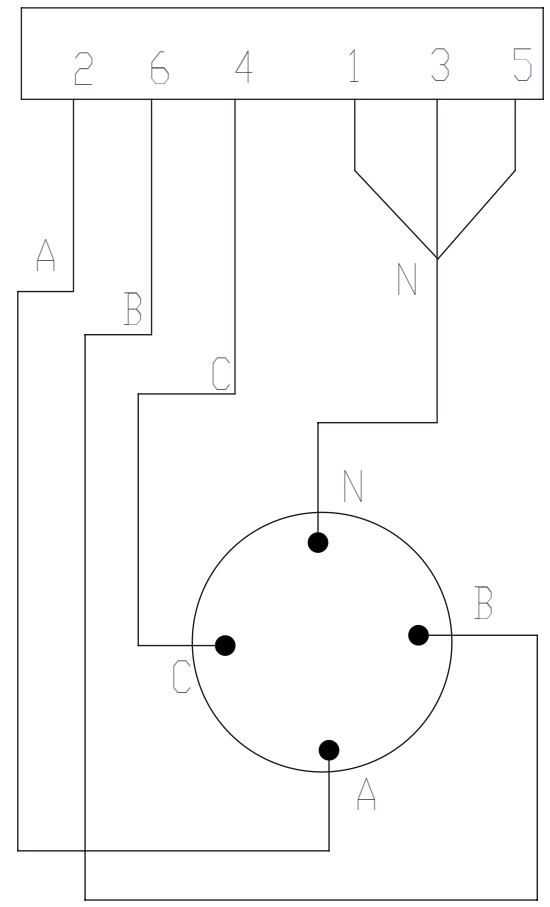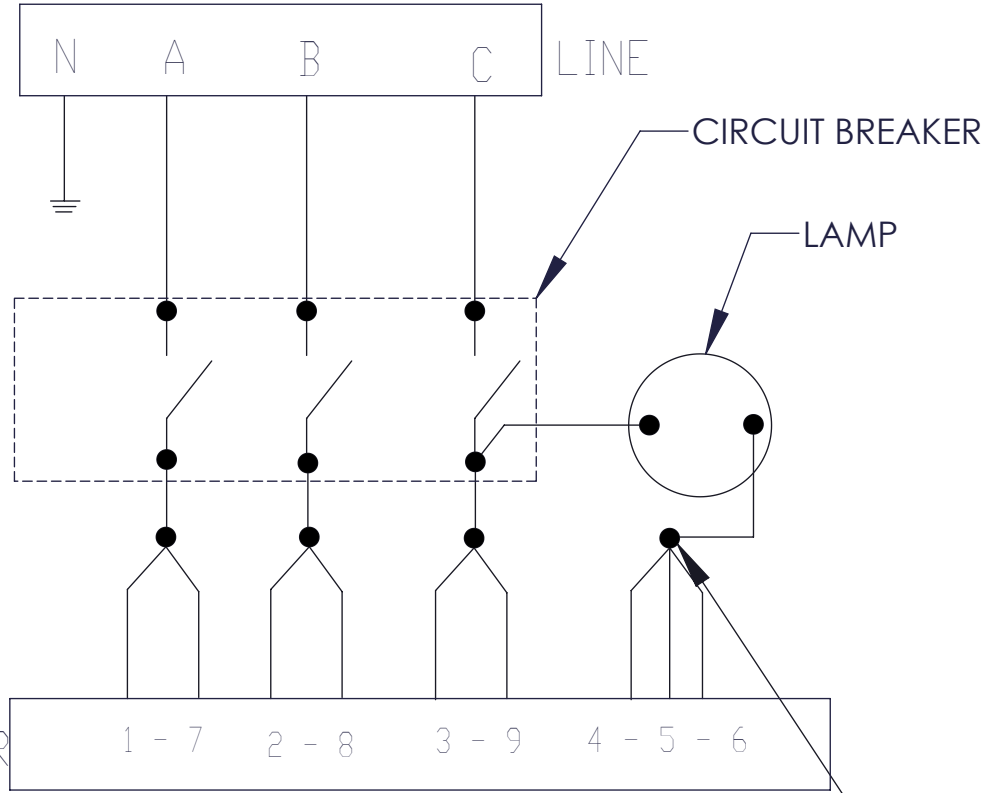


L - L = 200V
L - N = 115V

INPUT PHASE ROTATION EQUALS
OUTPUT PHASE ROTATION

TOGETHER & INSULATED

MODEL NO. 30-185

				UNSPECIFIED TOLERANCES FRACTIONS PLACE SCALE 1 PLACE .01 2 PLACE .003 3 PLACE .001 ANGLE DEG		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES.		 GEORATOR Corporation 9617 Center Street Manassas, VA 20110-5521, USA Telephone (703)-368-2101 FAX (703) 368-1078	
				PLOT @: TO FIT		AS SHOWN SCALE DRAWING		NAME	
				This drawing and any print thereof is the property of Georator Corporation and is subject to return on request by this company. The information shown is confidential and the recipient by accepting this drawing agrees not to use any information contained therein in any manner which will be detrimental to Georator Corporation.		DATE 3-13-08		WIRING DIAGRAM	
						DRAWN F.M.		INPUT: 3 PHASE OUTPUT: 3 PHASE	
						FILE 25-535 DWG		MATERIAL	
						APP'D.		FINISH	
						SCALE NONE		SHEET 1 OF 1	
								DWG. NO. A 25-535	
								REV.	
REV.	DESCRIPTION	DATE	BY						